



LUCAS

Quality

EQUIPMENT & SPARE PARTS

**FOR CARS AND
COMMERCIAL VEHICLES**

1945 — 1960

• BIRMINGHAM • ENGLAND



ALLARD 'J', 'J2' and 'J2X' Models 1949-55—continued

Table with columns: Unit, Year, Part No., Unit, Year, Part No., Unit, Year, Part No. Rows include SWITCHES, Warning lights, Windshield wipers, and various electrical components.

ALLARD 'J2R' Model 1956

Table with columns: Unit, Year, Part No., Unit, Year, Part No., Unit, Year, Part No. Rows include Ammeter, Battery, Control box, Generator, Horn, Junction box, LAMPS, and SWITCHES.

ALLARD 'K' and 'L' Models 1949-51

Table with columns: Unit, Year, Part No., Unit, Year, Part No., Unit, Year, Part No. Rows include Ammeter, Battery, Coil, Control box, Distributor, Fuse box, Generator, Horn, Low note, High note, Inspection lamp sockets, LAMPS, Head, Home, R.H.D., dip left, non-dip, dip right, non-dip, Head, Export, L.H.D., dip left, right, later, L.H.D., dip right, later.

ALLARD 'K3' Model 1954-55

Table with columns: Unit, Year, Part No., Unit, Year, Part No., Unit, Year, Part No. Rows include Ammeter, Battery, Coil, Control box, Distributor, Finisher unit, Fuse box, Generator, Horn, Low note, High note, LAMPS, Driving, Fog, Head, Home and Export, R.H.D., dip left, right, L.H.D., dip right.

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



ALLARD 'K3' Model 1954-55—continued

Table with columns: Unit, Year, Part No., Unit, Year, Part No., Unit, Year, Part No. Rows include SWITCHES, Windshield wipers, and various electrical components.

ALLARD 'P' and 'M' Models 1949-51

Table with columns: Unit, Year, Part No., Unit, Year, Part No., Unit, Year, Part No. Rows include Ammeter, Battery, Coil, Ignition, Control box, Distributor, Fuse box, Generator, Horn, LAMPS, SWITCHES, and Windshield wipers.

ALLARD 'P2' Model 1952-55

Table with columns: Unit, Year, Part No., Unit, Year, Part No., Unit, Year, Part No. Rows include Ammeter, Battery, Coil, Ignition, Control box, Distributor, Fuse unit, Fuse box, Generator, Horn, LAMPS, SWITCHES, and Windshield wipers.

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)

